


548 Series:
548, 3548, 4548, 6548

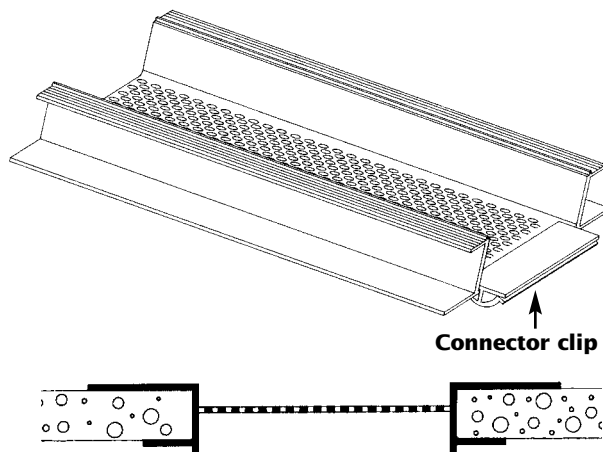


To install

- 1** Install one side of vent on sheathing product, with striated (ridged) side facing out (see detail 3).
- 2** Insert sheathing board into opposite flange. Attach board to soffit area.
- 3** Detail showing striations (ridges)
- 4** Install mesh **over** vent flanges per industry standards.

Other notes

Vent comes in 10' (3 m) lengths for continuous application. Use supplied connector clips to join pieces together.

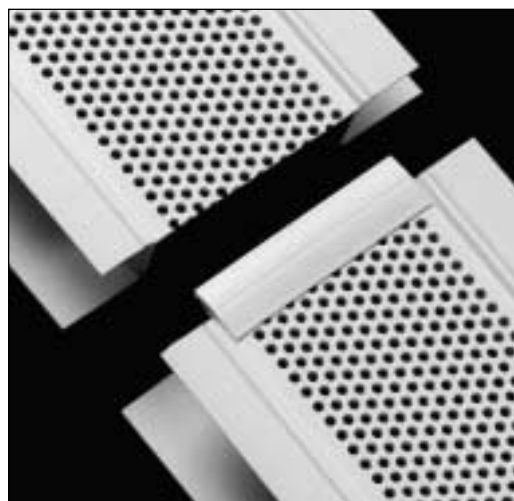

Instrucciones en español al dorso

Warnock Hersey
WV
C F US
LISTED PRODUCT