


549 Series:
549, 3549, 4549, 6549

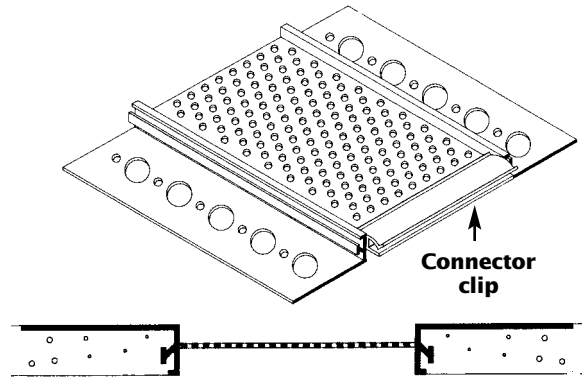


To install

- 1** Fasten vent to joist.
- 2** Shim as necessary to maintain a level line.
- 3** Install lath **over** flanges per industry standards.

Other notes

Vent comes in 10' (3 m) lengths for continuous application. Use supplied connector clips to join pieces together.

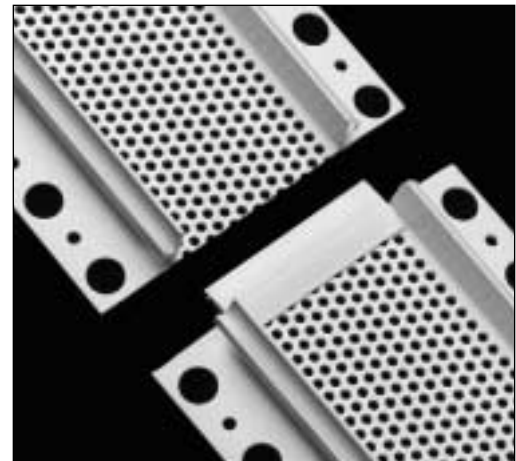

*Instrucciones en
español al dorso*

Warnock Hersey
W
c us
LISTED PRODUCT