


**F549WF551 Series:
F549WF551, F3549WF551,
F4549WF551**

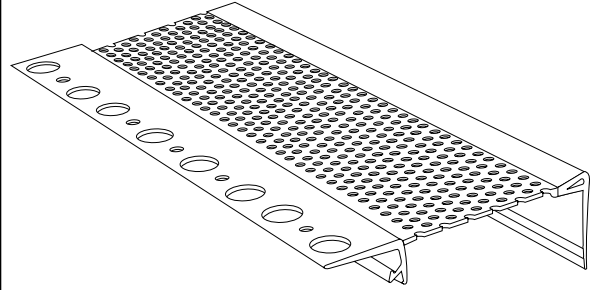


To install

- Option 1: Attach 90° flange to fascia board. Insert vent into the "F" clip on flange.
Option 2: Assemble 2-piece vent, then attach assembly to fascia board and joists.

- Install lath **over** flange per industry standards.

Other notes

Vent comes in 10' (3 m) lengths for continuous application. Use supplied connector clips to join pieces together.

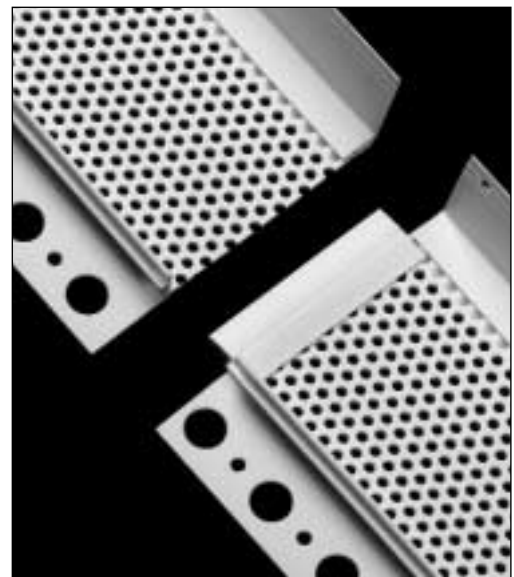

Instrucciones en español al dorso

Warnock Hersey
c F H us
LISTED PRODUCT