



300 Series:
300, 301, 3300, 4300, 6300


To install

- 1** Install vent on one side of soffit plywood (between plywood and bottom of truss).
- 2** Install plywood on opposite side of vent.
- 3** Vent flanges rest on top of the soffit board.





Other notes

Vent comes in 10' (3 m) lengths for continuous application. Use supplied connector clips to join pieces together.

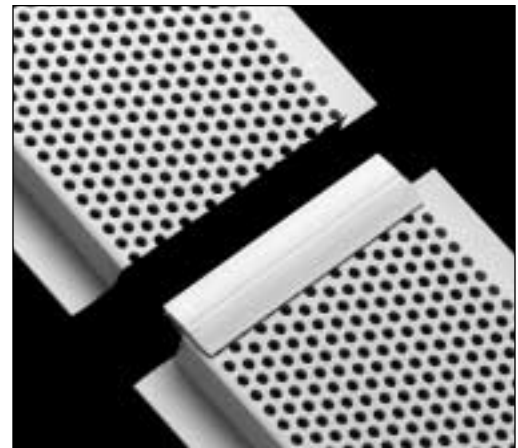

Nominal size: 3/8"

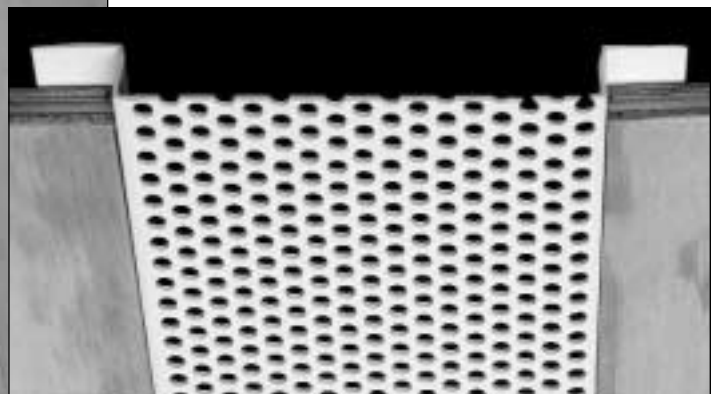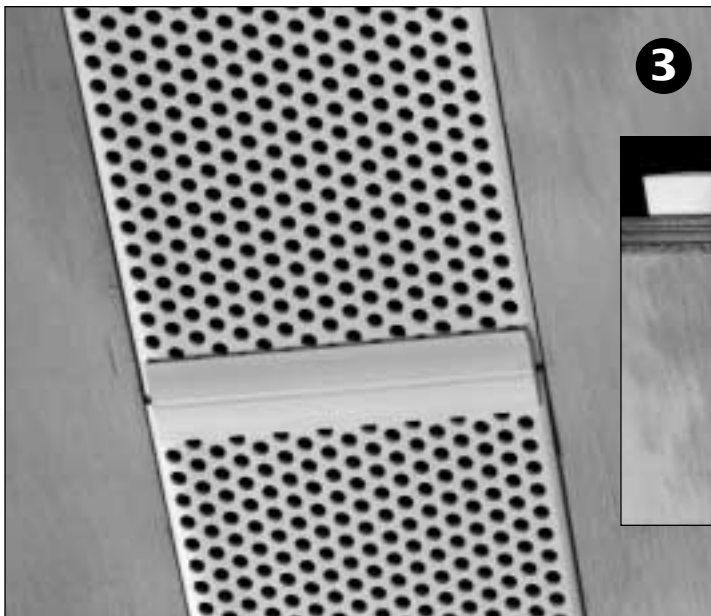

*Instructions in
Spanish on back*

Warnock Hersey
W
c **PC** us
LISTED PRODUCT

Serie:

300, 301, 3300, 4300, 6300


Para instalar

- 1** Instale el respiradero a un lado de las planchas de madera contrachapada del falso techo (entre la plancha de madera contrachapada y la parte inferior de la armazón)
- 2** Instale la plancha de madera contrachapada en la otra cara del respiradero.
- 3** Las pestañas del respiradero descansan encima de la plancha del falso techo.





Notas adicionales

El respiradero viene en piezas de una longitud de 10' (3m) para instalarlas una a continuación de la otra. Utilice las grapas conectoras suministradas para unir las piezas.

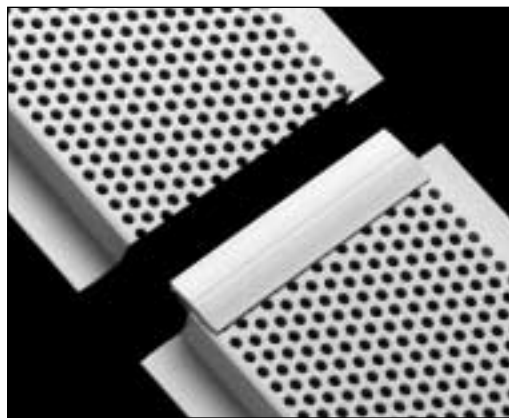

Medida Nominal: 3/8"

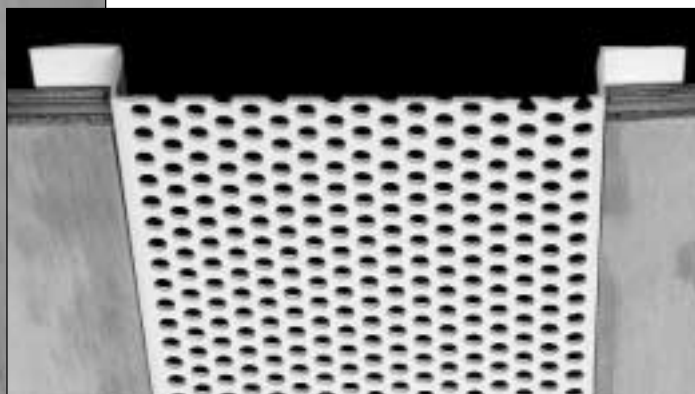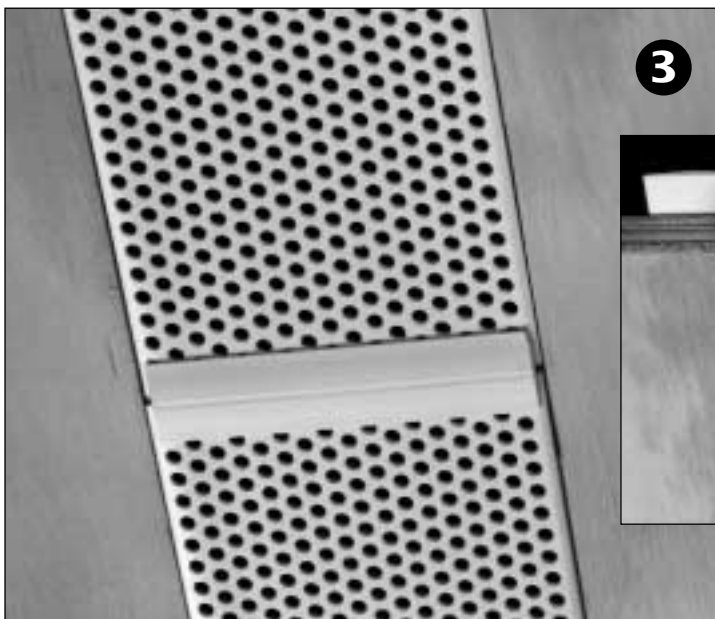

*Instrucciones en
inglés al dorso*

Warnock Hersey
c **HW** us
LISTED PRODUCT