


**548 Series:  
548, 3548, 4548, 6548**

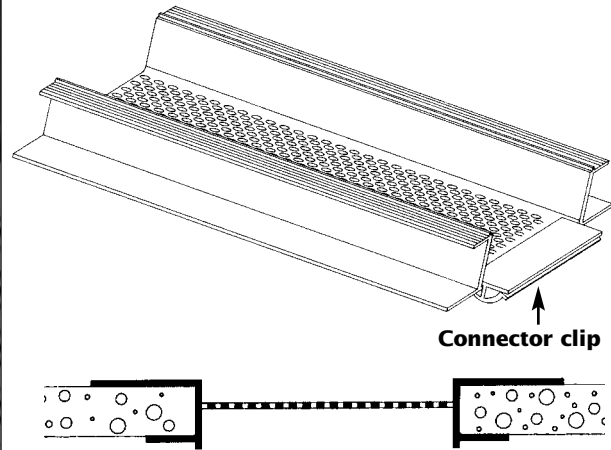


**To install**

- 1** Install one side of vent on sheathing product, with striated (ridged) side facing out (see detail 3).
- 2** Insert sheathing board into opposite flange. Attach board to soffit area.
- 3** Detail showing striations (ridges)
- 4** Install mesh **over** vent flanges per industry standards.




**Other notes**

Vent comes in 10' (3 m) lengths for continuous application. Use supplied connector clips to join pieces together.

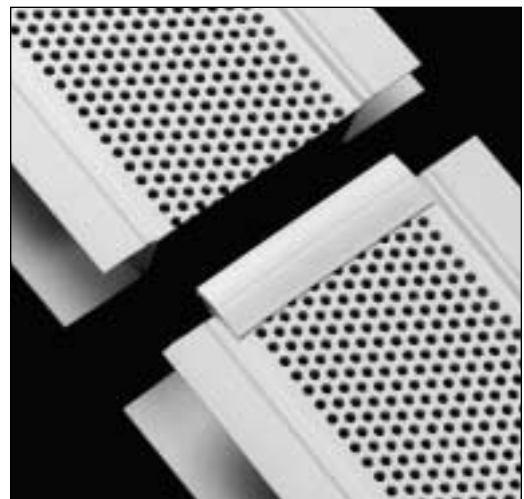


*Instructions in  
Spanish on back*

Warnock Hersey  
**WV**  
C I U S  
LISTED PRODUCT

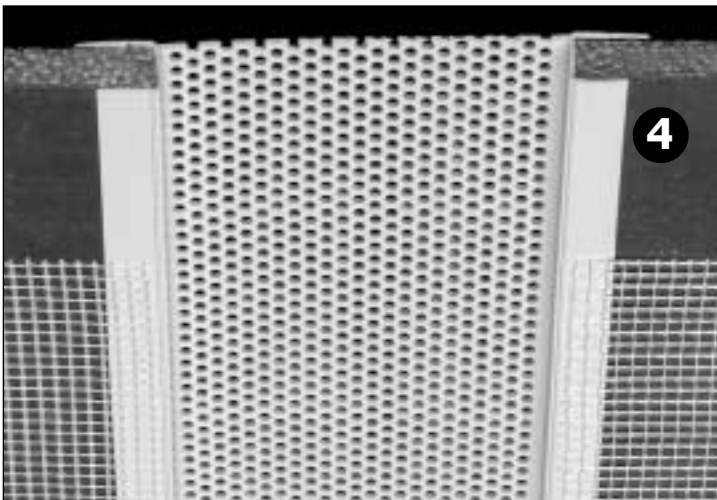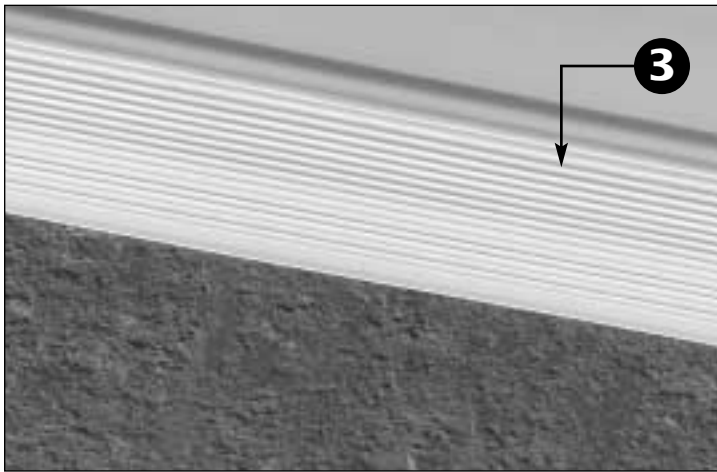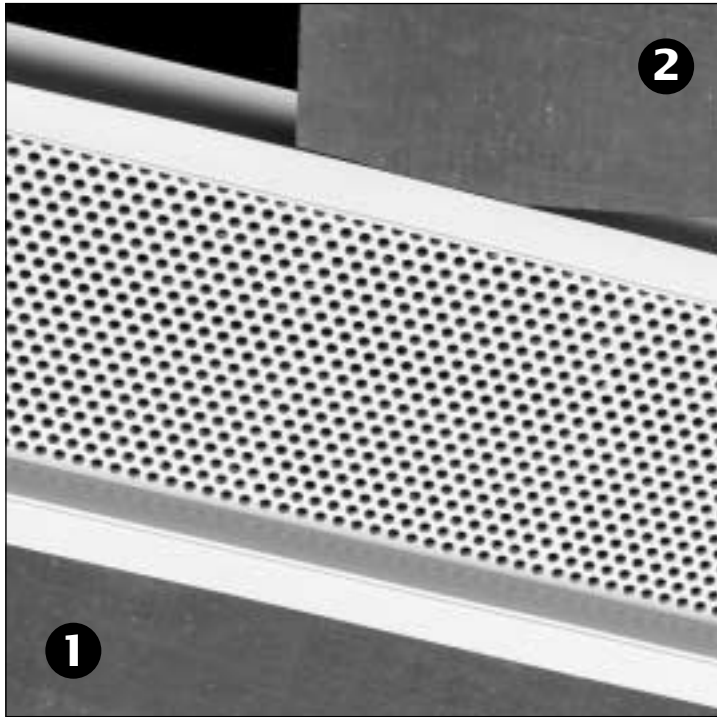

**Serie 548 :**  
**548, 3548, 4548, 6548**

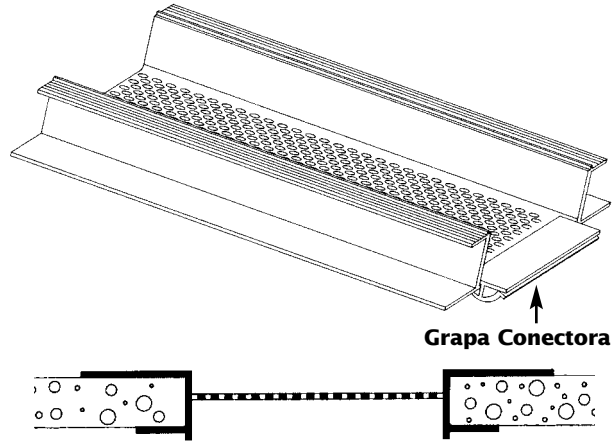


**Para Instalar**

- 1** Instale un lado del respiradero sobre el revestimiento, con la cara estriada (acanalada) hacia afuera (vea la ilustración número 3).
- 2** Inserte el tablero de revestimiento en la pestaña opuesta. Fíjelo al área del falso techo.
- 3** Ilustración que muestra las estrías (acanalado).
- 4** Instale la cubierta de malla **sobre** las pestañas del ventilador, de acuerdo con las normas de la industria.

**Notas adicionales**

El respiradero viene en piezas de una longitud de 10' (3m) para instalarlas una a continuación de la otra. Utilice las grapas conectoras suministradas para unir las piezas.

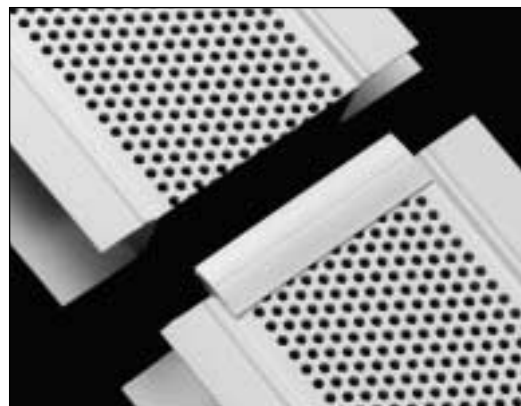

*Instrucciones en inglés al dorso*

Warnock Hersey  
**WV**  
C H I U S  
LISTED PRODUCT