


**548 Series:  
548, 3548, 4548, 6548**

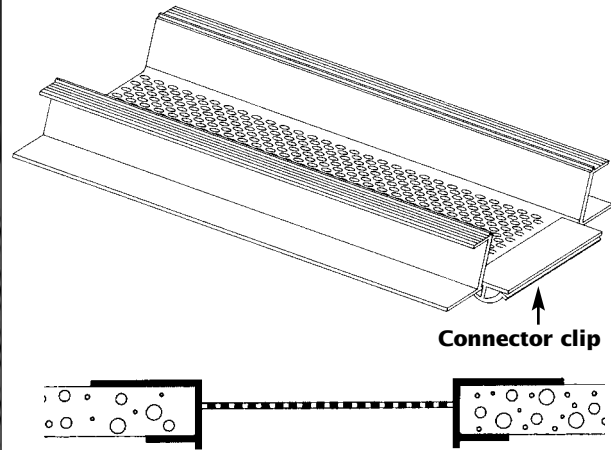


**To install**

- 1** Install one side of vent on sheathing product, with striated (ridged) side facing out (see detail 3).
- 2** Insert sheathing board into opposite flange. Attach board to soffit area.
- 3** Detail showing striations (ridges)
- 4** Install mesh **over** vent flanges per industry standards.

**Other notes**

Vent comes in 10' (3 m) lengths for continuous application. Use supplied connector clips to join pieces together.

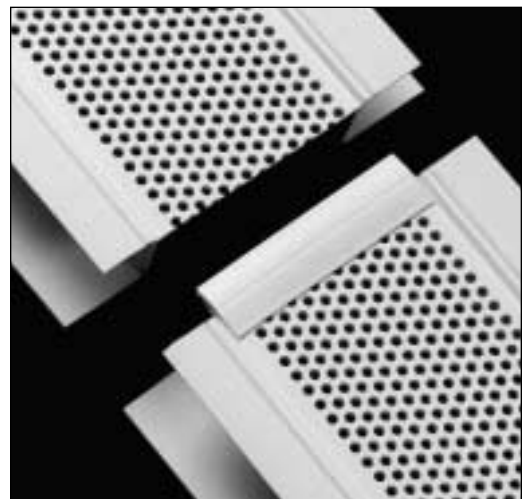

*Instructions in  
Spanish on back*

Warnock Hersey  
**WV**  
C I us  
LISTED PRODUCT