


**549 Series:**  
**549, 3549, 4549, 6549**

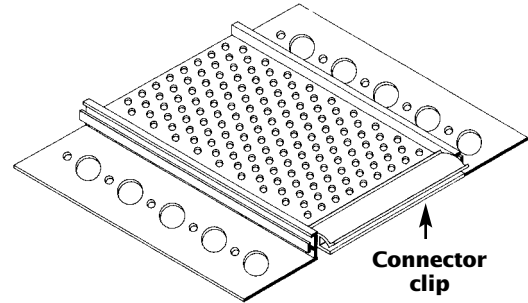


**To install**

- 1 Fasten vent to joist.
- 2 Shim as necessary to maintain a level line.
- 3 Install lath **over** flanges per industry standards.

**Other notes**

Vent comes in 10' (3 m) lengths for continuous application. Use supplied connector clips to join pieces together.

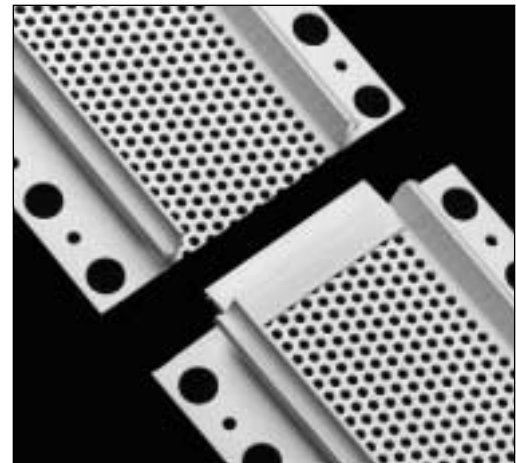

*Instructions in Spanish on back*

Warnock Hersey  
c H us  
LISTED PRODUCT