


**F548 Series:
F548, F3548, F4548, F6548**

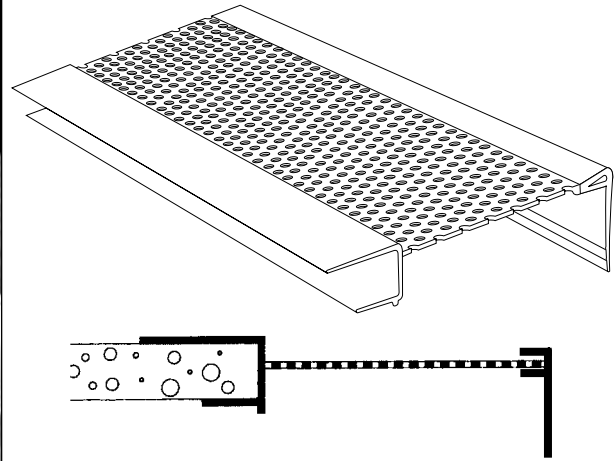


To install

- 1** Option1 (shown):
Attach 90° flange to fascia board.
- 2** Insert vent into the "F" clip on flange.

Option 2: Assemble 2-piece vent, then
attach assembly to fascia and soffit area.
- 3** Slip sheathing board into channel of flange.
- 4** Install mesh and base **over** flange per
industry standards.

Other notes

Vent comes in 10' (3 m) lengths for
continuous application. Use supplied
connector clips to join pieces together.

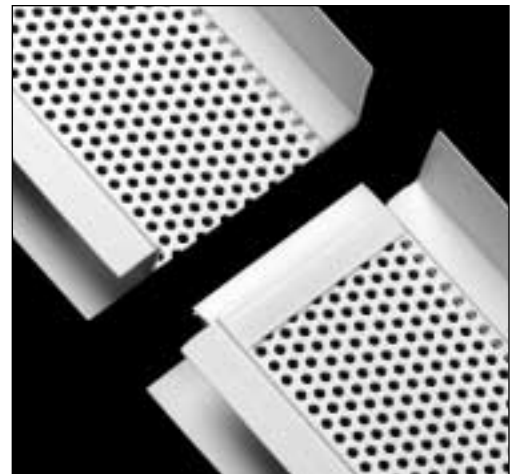

*Instructions in
Spanish on back*

Warnock Hersey
c  us
LISTED PRODUCT