

Since 1969  
**PLASTIC PC**  
**COMPONENTS** inc.

**ULTRA ROOF MAT™**

Install plywood roof sheathing onto rafters. Install roofing felt or ice dam protection membrane over sheathing. Check local codes and manufacturer's recommendations for specific requirements.


Install ULTRA ROOF MAT™ over roofing felt, ice protection membrane, and metal edge flashing or drip edge. Ensure ULTRA ROOF MAT™ material is installed flush against edge of the flashing or drip edge. Carefully trim the ULTRA ROOF MAT™ material at all penetrations with a utility knife or scissors.

**When installing cedar or alternate material shingles,** unroll ULTRA ROOF MAT™ horizontally just ahead of the shingles as they are installed. Tack or nail ULTRA ROOF MAT™ in place every three square feet. Do not overlap the ULTRA ROOF MAT™ material. Butt each course tightly against the previous course and at vertical seams.

**When installing vertical metal roofing panels,** unroll ULTRA ROOF MAT™ vertically from ridge to eave just ahead of the metal panels as they are installed. Tack or nail ULTRA ROOF MAT™ in place every three square feet. Do not overlap the ULTRA ROOF MAT™ material. Butt each course tightly against the previous course and at vertical seams.

**At ridge locations,** extend ULTRA ROOF MAT™ material over the ridge and butt against the material on the opposite side of the roof. If a ridge vent is utilized, follow the ridge vent manufacturer's recommendations for underlayment material installation.

Apply roofing materials using manufacturer's recommended fasteners and instructions, allowing for the additional 3/8" thickness of the ULTRA ROOF MAT™ material.

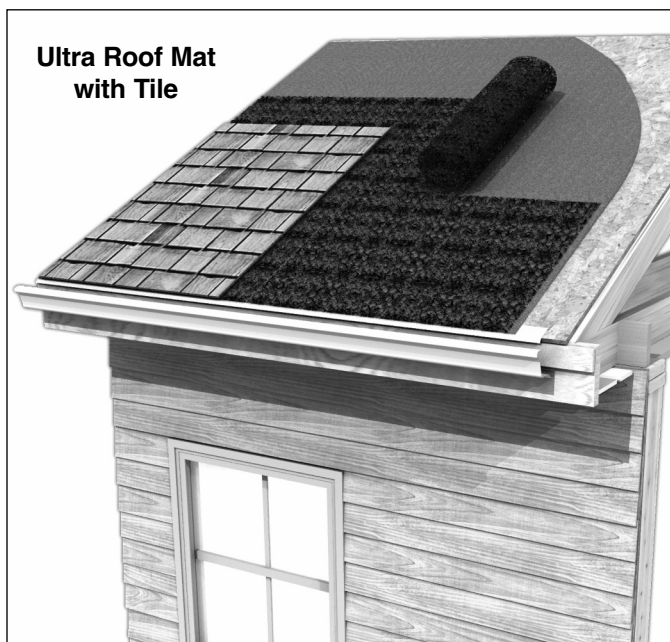

**INSTALLATION INSTRUCTIONS**