


548

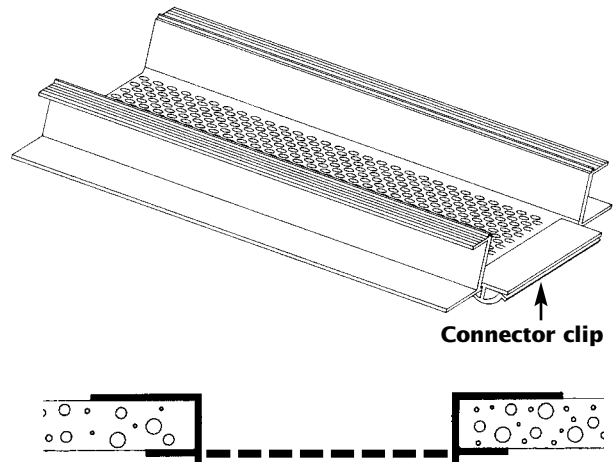


To install

- 1** Install one side of vent on sheathing board, with striated (ridged) side facing out (see detail 3).
- 2** Insert EPS board into flange.
- 3** Detail showing striations (ridges).
- 4** Install base and mesh **over** flanges per industry standards.

Other notes

Vent comes in 10' (3 m) lengths for continuous application. Use supplied connector clips to join pieces together.

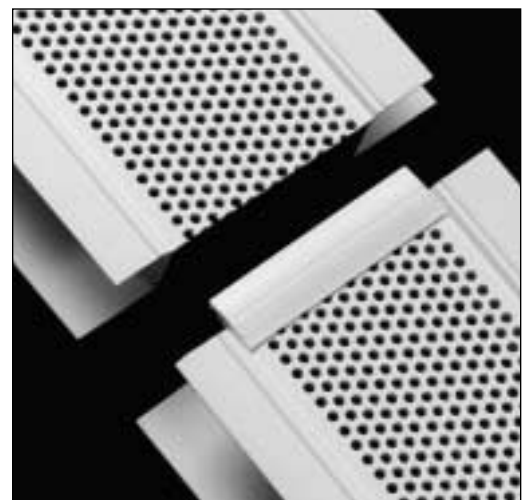

Instrucciones en español al dorso

Warnock Hersey
c  us
LISTED PRODUCT